

# Pocket Keyboard



## User manual



[www.bodet-sport.fr](http://www.bodet-sport.fr)

**BODET SA**  
BP30001  
49340 Trémentines I FRANCE  
Tél. +33 241 71 72 00  
Fax +33 241 71 72 01



Réf : 606959G

Upon receipt, always check the product for damage during shipment. If any is found, you may file a damage claim with the carrier.

## Table of contents

1. How to switch on the keyboard ?.....	5
2. How to switch off the keyboard ?.....	5
3. How to start a match ?.....	5
4. How to change the parameters of a sport ? .....	5
5. Default parameters .....	6
6. How to start/stop the clock ? .....	6
7.How to add a point to the home or visiting team ? .....	6
8. How to deduct a point from the home or visiting team ? .....	6
9. How to sound the horn ? .....	6
10. How to stop the horn ? .....	6
11. How to start a new match ? .....	6
12. How to reset the clock ? .....	6
13. How to add/deduct seconds on the clock ?.....	7
14. How to switch from a match display to the time display ? .....	7
15. How to adjust the brightness of the scoreboard ? .....	7
16. How to change the time ?.....	7
17. Test mode .....	7
18. Technician menu.....	8

**To view the scoreboard display concerning to the pocket keyboard, refer to the manual delivered with your scoreboard**



Key function	Index
Display time or stop keyboard	1
Start/stop clock or switch on keyboard	2
Adjust scoreboard brightness	3
Horn	4
Reset clock	5
Validate a parameter and start a new match	6
Next parameter or add a second in a match	7
Previous menu or deduct a minute in a match	8
Next menu or add a minute in a match	9
Previous parameter or deduct a second in a match	10
Add a point to the HOME / VISITORS score	11 and 11'
Deduct a point from the HOME / VISITORS score	12 and 12'

The Pocket and Alphascor keyboards **cannot** be used at the same time. If necessary, switch off the Alphascor keyboard.

## 1. How to switch on the keyboard ?

Press START/STOP (2) for 3 seconds.

## 2. How to switch off the keyboard ?

Press OFF (1) (with the clock stopped) for 3 seconds.

## 3. How to start a match ?

On start-up, select a type of match (P1 to P9) with the ◀ key (8) and the ▶ key (9). Validate by pressing OK (6). The match is ready to be started.

*Programs P1 to P8 are all programmable, P9 is dedicated to pelota.*

*Note: there are no programmable programs for the BT2025 and BT2045 SCORE models; the match is ready as soon as the board is switched on.*

## 4. How to change the parameters of a sport ?

Press the ◀ key (8) and the ▶ key (9) at the same time for 3 seconds during a match (with the clock stopped). Navigate in the menus with the ◀ key (8) and the ▶ key (9) and modify the values with the + key (7) or the - key (10).

Validate by pressing OK (6).

**For programs P1 to P8 :**



Period duration (1 to 99).



Period number (1 to 99).



Stopwatch (UP) or Timer (do) mode of the game clock.



Cumulative period duration: Yes (Y) or No (n). (e.g. by choosing Yes for a 2 x 10mn periods game, the game clock will count from 10 to 20 in the second period; however if the choice is No, the game clock will count from 0 to 10 in the second period.  
This applies also for the Extra-time periods.



Extra-time duration (1 to 99). (Et = Extra-time).



Number of Extra-times (1 to 99).



Time-out duration (0 to 60 sec).



Time-out number.



CS = Chrono + Score  
TS = Time + Score  
S = Score



Hn: Horn enabled (y) yes or (n) no



nS: total number of points in the match (1 to 99).

nS = 0 no management of the score max.

nS different from 0, the game clock stops when a team's score reaches the value programmed in nS, the clock can be restarted.

## 5. Default parameters

The default parameter settings of each program P1 to P9 are as follows :

	P1	P2	P3	P4	P5	P6	P7	P8	P9
tP Period length	45	40	20	40	35	30	45	10	-
nP Number of periods	2	2	2	2	2	2	2	1	50 (points)
Co Count-up / Count-down	UP	UP	UP	UP	UP	UP	UP	do	-
CP Cumulative period	n	n	n	n	n	n	n	n	-
Et ET period length	15	15	15	10	10	10	15	15	-
nE Number of ET periods	2	2	2	2	2	2	2	0	-
t0 Time-outs	0	0	0	0	0	0	30	30	-
nt Nber of Time-outs	0	0	0	0	0	0	1	1	-
DS Time + score	CS	CS	CS	CS	CS	CS	CS	CS	TS
Hn Horn activation	y	y	y	y	y	y	y	y	-
nS Score max.	0	0	0	0	0	0	0	21	-

To pass from one program to another :

Press the OK key (6) for 3 seconds and keys ◀ (8) and ▶ (9).

To reset all the default parameters, switch to time mode by pressing OFF (2).

Press the + key (7) and the - key (10) at the same time for 3 seconds.

Select Yes (y) or No (n) with the + (7) and - (10) keys.

Validate by pressing OK (6).

## 6. How to start/stop the clock ?

During a match, press START/STOP (2) to start the clock; press again to stop it.

## 7. How to add a point to the home or visiting team ?

Press the HOME + key (11) or the VISITORS + key (11').

## 8. How to deduct a point from the home or visiting team ?

Press the HOME - key (12) or the VISITORS - key (12').

## 9. How to sound the horn ?

Press the horn key (4).

## 10. How to stop the horn ?

Press the horn key (4) while it is being sounded.

## 11. How to start a new match ?

Press the OK key (6) for 3 seconds.

## 12. How to reset the clock ?

Press the RESET key (5) for 3 seconds; the clock goes to the start of the period.

## 13. How to add/deduct seconds on the clock ?

With the clock stopped, press the + key (7) for 3 seconds; the readout flashes.

Use the + key (7) and the - key (10) to adjust the seconds within the limit of the period.

Validate by pressing OK (6).

## 14. How to switch from a match display to the time display ?

During a match and with the clock stopped, press the OFF key (1); the board displays the time.

When the time is displayed, you can press the OFF key (1) to display the match.

## 15. How to adjust the brightness of the scoreboard ?

Press the light bulb key (3). The brightness is adjusted each time you press the key.

## 16. How to change the time ?

To display the time, press the OFF key (2).

Press the ◀ key (8) and the ▶ key (9) at the same time; the minutes flash.

Adjust the minutes with the + key (7) and the - key (10).

Press the ◀ key (8) or the ▶ key (9); the hours flash.

Adjust the hours with the + key (7) and the - key (10).

Validate by pressing OK (6).

## 17. Test mode

Switch to time mode by pressing the OFF key (2).

Press the RESET key (5) for 3 seconds.

*Test mode is executed in the following order.*

*1/ Display of program version number.*

*2/ Display of ribbon cable number.*

*3/ Display of address of each module.*

*4/ Display completely lit.*

*5/ Board switched off.*

*6/ Display of keyboard channel number.*

*7/ Return to normal mode.*

## 18. Technician menu

To enter the technician menu, press the + key (7) and the - key (10) at the same time for 3 seconds. Select the parameters with the + key (7) and the - key (10).

Validate by pressing OK (6).

dF: if yes (y), restore the default factory settings.

Ec: if yes (y), the scoreboard display will be blank when not used (Eco mode).

if no (n), the scoreboard will display time when not used.

**THE DOCUMENT IS CONCERNING THE FOLLOWING PRODUCT :**

**915160**

**POCKET KEYBOARD**