


BODET Scorepad



User Manual - Futsal

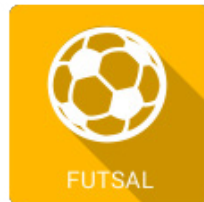

www.bodet-sport.com

BODET SA
BP30001
49340 Trémentines | France
Tel: +33 (0)2 41 71 72 98
Fax: +33 (0)2 41 71 72 01



Ref.: 608084 A

Ensure on delivery that the product has not been damaged in transport.

1. Futsal


1) Select  on the home screen.

2) Select a configuration from the list:

FUTSAL 2x20 min 


FUTSAL 2x15 min 

FUTSAL 2x8 min 


Configurations identified by  can only be edited with the club code.


The club Access code is "1234". It can be changed in the "Club access" menu.

3) Screen in HOCKEY FUTSAL 2x20 min match mode:

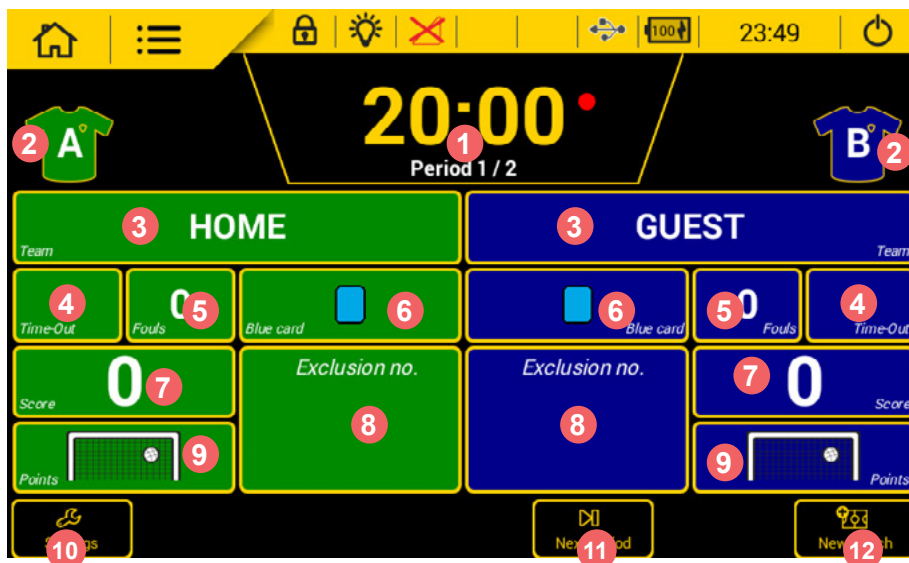


Pressing a game setting brings up a new window in which you can:


- 1 edit the length: duration of each period. The buzzer can be triggered at each end of period and the timer reset.
- 2 edit colour of team shirts and game markings. A standard colour scheme is provided as well as a palette to set your own colour.
- 3 edit the name of the team. After pressing LOCALS or VISITORS, press  Config. team to edit the configuration of the teams (edit team screen name, activate players, choice of colours, load a team, create a new team or delete a team):

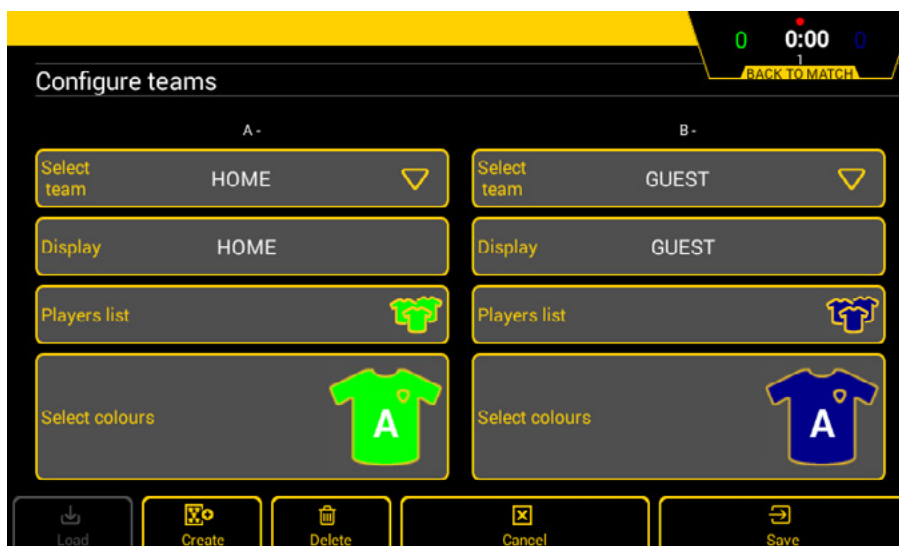

- 4 add time-out.
- 5 add or delete a fault.
- 6 add a blue card.
- 7 change the score.
- 8 display of the suspended players.
- 9 add a goal.
- 10 edit the configuration settings (see next page for the list of settings).
- 11 go to the next period.
- 12 start a new match. **Caution: the match in progress will be lost.**

> ENTERING CONFIGURATION SETTINGS

1) Click  to edit a configuration. The list of editable settings is given below:

Note : All these settings are accessible from the  **Advanced Settings** menu.

The list of editable settings is given below:

Headings	Settings	Default values	Description	Standard settings
Before match				
	Buzzer before match	OFF	Activation of the pre-end horn with the ON/OFF key 1 to 9 minutes and 0 to 59 seconds in steps of 1	-
		OFF	Activation of the 2nd pre-end horn with the ON/OFF key 1 to 9 minutes and 0 to 59 seconds in steps of 1	-
	Time before match	OFF	Activation of the end horn of with the ON/OFF key Function enabled using the ON/OFF button 1 to 180 minutes in steps of 1	-
Match				
	Period number	2	1 to 9 periods in steps of 1	√
	Playing time	20:00	1 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1	√
	Accumulation period	OFF	Function enabled using the ON/OFF button	-
	Period mode	DOWN	Count-up or countdown	-
	End of period buzzer	OFF	Function enabled using the ON/OFF button 1 to 5 seconds in steps of 1	-
Extension				
	Number extension	1	Function enabled using the ON/OFF button 1 to 9 periods in steps of 1	√
	Time extension	10:00	1 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1	-
	Time rest	2:00	Function enabled using the ON/OFF button 0 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1	√
Time-out				
	Buzzer time-out	OFF ON	Function enabled using the ON/OFF button 1 to 20 seconds in steps of 1	√
	Duration half time	15:00	Function enabled using the ON/OFF button 0 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1	√
	Icebreaking time	2:00	Function enabled using the ON/OFF button 0 to 10 minutes in steps of 1 0 to 59 seconds in steps of 1	-
Cards and exclusions				
	Activation penalties	ON	Function enabled using the ON/OFF button	-
	Duration exclusion	2m	1 to 9 minutes in steps of 1	-
	Buzzer end penalty	OFF	Function enabled using the ON/OFF button 1 to 5 seconds in steps of 1	-
	Display number player	OFF	Function enabled using the ON/OFF button	-
	Display card	OFF	Function enabled using the ON/OFF button	√
Points and fouls				
	Total team fouls	Half-time 6	Reset of the total of fouls per period or at half-time. Total team fouls 1 to 9 in steps of 1.	√
	Points per player	OFF	Function enabled using the ON/OFF button	√
Time-out				
	Plots TM	60s Number of Time-out		-
	Buzzer TM	10s ON	Buzzer duration to call a time-out: Function enabled using the ON/OFF button 1 to 20 seconds in steps of 1 Buzzer end of time-out: Function enabled using the ON/OFF button	-

HDMI				
	Logo partner	OFF	Function enabled using the ON/OFF button	-
	Wallpapers	ON	Function enabled using the ON/OFF button	-
	Display penalties	OFF	Function enabled using the ON/OFF button	-
	Display card	OFF	Function enabled using the ON/OFF button	-
Function keys				
	Alpha message	OFF	Function enabled using the ON/OFF button	-
	Next period	ON	Function enabled using the ON/OFF button	-