

# BODET Scorepad



## User manual - Multisports



[www.bodet-sport.com](http://www.bodet-sport.com)

**BODET SA**  
BP30001  
49340 Trémentines | France  
Tel: +33 (0)2 41 71 72 98  
Fax: +33 (0)2 41 71 72 01



Réf.: 608113 A  
08/17


Ensure on delivery that the product has not been damaged in transport.

# 1. Multisports


1) Select .

2) Select a configuration from the list:

- MULTISPORT 2x30 min (stopwatch and score) 
- MULTISPORT 2x30 min (stopwatch, score and fouls) 
- MULTISPORT 4x15 min (stopwatch and score) 
- MULTISPORT 1x19 min (stopwatch and score) 


Configurations identified by  can only be edited with the club access code. The club Access code is “1234”. It can be changed in the “Club access” menu.

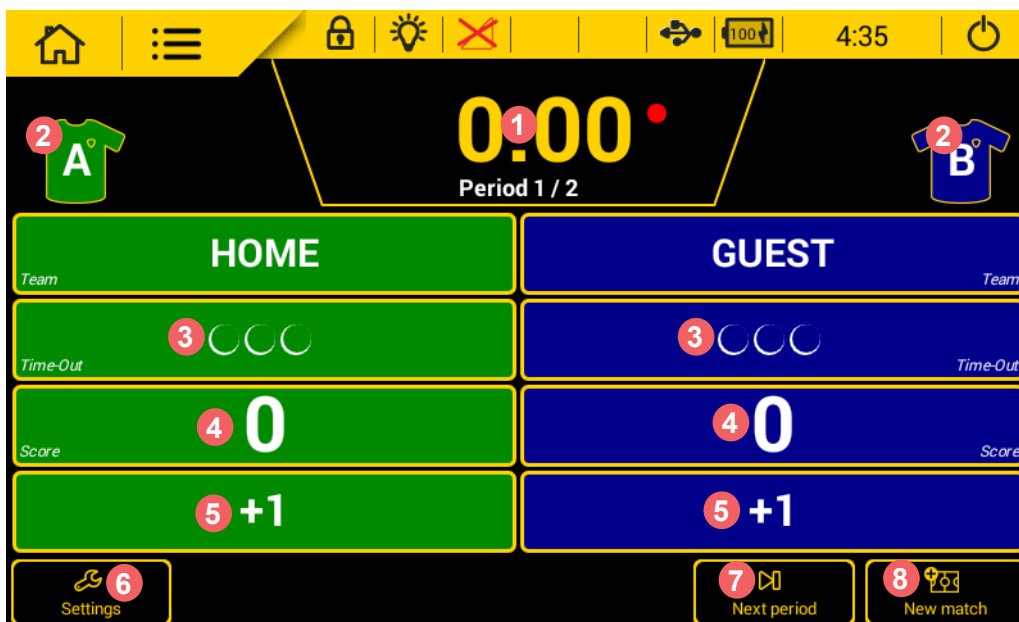

3) Screen in MULTISPORT 2x30 min match mode:



Pressing a game setting brings up a new window in which you can:

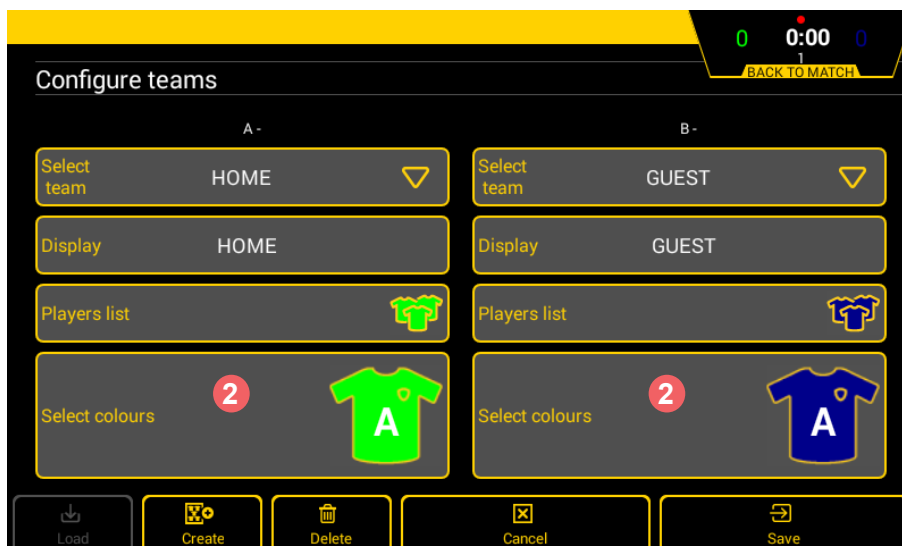- 1 edit the length of each period. The buzzer can be triggered at each end of period and the timer reset.
- 2 edit colour of team shirts and game markings. Standard colours are provided plus a palette to select each team's colours.



- 3 call a time-out. To start the countdown, press the **START**  button. Add or delete a time-out by pressing **Correction** .
- 4 add or delete a point to the team's score.
- 5 add 1 point to the team's score.
- 6 edit the configuration settings (see next page for the list of settings).
- 7 display the next period.
- 8 start a new match. **Caution: the match in progress will be lost.**

## > ENTERING CONFIGURATION SETTINGS

1) Click  to edit a configuration.

**Note** : All these settings are accessible from the  **Advanced Settings** menu.

The list of editable settings is given below:

Headings	Settings	Default values	Description	Standard settings
<b>Match</b>				
	Display mode	Score and stopwatch	3 choices available: Score only, Score and stopwatch, Score and time	√
	End of period buzzer	5	Function enabled using the ON/OFF button 0 to 5 seconds in steps of 1	-
<b>Extra time</b>				
	Extra time number	9	Function enabled using the ON/OFF button 1 to 9 periods in steps of 1	√
	Extra time duration	5:00	1 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1	√
	Time-out	2:00	Function enabled using the ON/OFF button 0 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1	√
<b>Rest time</b>				
	Buzzer rest time	-	Buzzer duration to call a rest time Function enabled using the ON/OFF button 1 to 300 seconds in steps of 1 Buzzer can be triggered for end of rest-time	√
	Duration half time	10:00	Function enabled using the ON/OFF button 0 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1	√
	Icebreaking time	2	Function enabled using the ON/OFF button 1 to 90 minutes in steps of 1 0 to 59 seconds in steps of 1	-
<b>Points and fouls</b>				
	Total team fouls	Period 5	Option to reset fouls for each period or at half-time. Accumulated fouls can be set from 1 to 9 with the option of switching OFF.	√
<b>Time-out</b>				
	Buzzer T-O	10s OFF	Buzzer duration to call a time-out Function enabled using the ON/OFF button 0 to 20 seconds in steps of 1 Buzzer can be triggered for end of time-out	√
	Plot T-O	half-time 3	Displays time-out markers 1 to 6 markers	-
<b>HDMI</b>				
	Load image	ON	Enabling wallpaper image (if OFF = wallpaper black)	-
<b>Function keys</b>				
	Alpha message	ON	Enable or disable using the club code	-
	Next period	ON	Enable or disable using the club code	-