


BODET Scorepad



User manual - Karaté

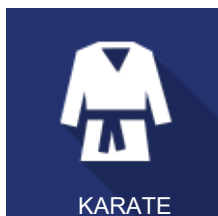

www.bodet-sport.com

BODET SA
1 rue du Général de Gaulle
49340 Trémentines | France
Tél: +33 (0)2 41 71 72 99
Fax: +33 (0)2 41 71 72 01



100% papier recyclé



Réf.: 608193 B


Ensure on delivery that the product has not been damaged in transport.

1. Karaté

1) Select  on the home screen.

2) Select a configuration from the list :

- SENIOR 
- YOUNG 
- 2*2min 


Configurations identified by  can only be edited with the club code.


The club Access code is "1234". It can be changed in the "Club access" menu.

3) Screen in SENIOR :



Pressing a game setting brings up a new window in which you can:

- 1 edit the length : duration of fight.
- 2 edit colour of team shirts and game markings. A standard colour scheme is provided as well as a palette to set your own colour.
- 3 edit the name of the team. After pressing HOME or GUEST, press  Team config. to edit the configuration of both teams (switch teams, edit team screen name, activate players, choice of colours, load configuration, create a new configuration or delete this configuration):

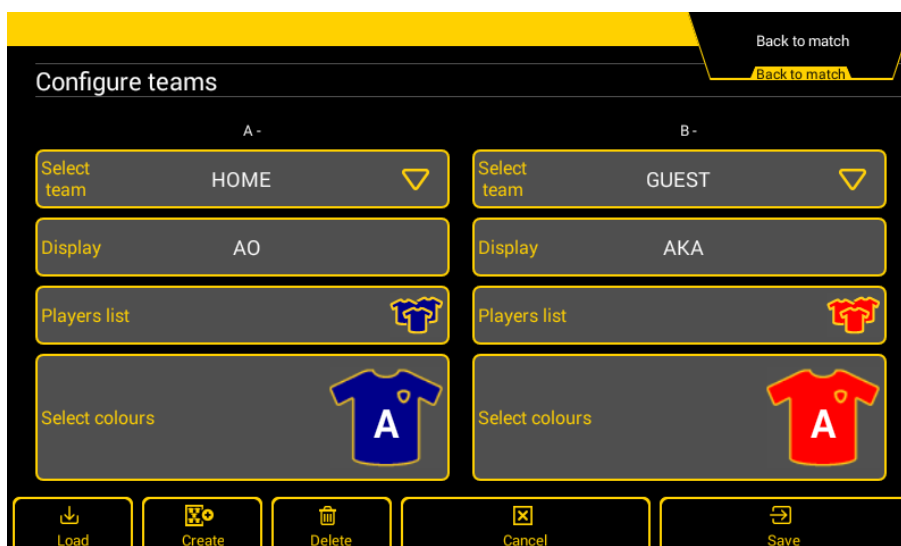

- 4 add a Yuko.
- 5 add a Waza-Ari.
- 6 add a Ippon.
- 7 display of each fighter's score.
- 8 add a penalty CAT 1.
- 9 add a penalty CAT 2.
- 10 enable the 10 seconds injury time.
- 11 edit the configuration settings (see next page for the list of settings).
- 12 selection of the karateka who won the fight.
- 13 manually enter the tournament name and category.
- 14 switch to Encho-sen (the bout is prolonged).
- 15 reversal of the AO - AKA display.
- 16 start a new match. **Warning: the match in progress will be lost.**

2. Entering configuration settings

1) Click  to edit a configuration.

NB: all these settings are accessible from the  **Advanced settings** menu.

The list of editable settings is given below:

Headings	Settings	Default values	Description	Standard settings
Fight				
	Period number	1	1 to 9 periods in step of 1	-
	Period time	3:00	1 to 99 minutes in step of 1 0 to 59 secondes in step of 1	✓
	Period mode	Down	Count up (UP) or countdown (Down). Can be modified. Requires the club access code.	✓
	Before end period horn	15s	Function enabled using the ON/OFF button 1 to 120 secondes in step of 1	✓
	End period horn	3s	Function enabled using the ON/OFF button 1 to 5 seconds.	✓
	Tatami sound	1	1 to 12 sounds with test button.	✓
Encho-sen				
	Encho-sen	ON	Function enabled using the ON/OFF button. Requires the club access code.	✓
	Extra time mode	UP	Count up (UP) or countdown (Down). Can be modified. Requires the club access code.	✓
	Encho-sen duration	5:00	1 to 99 minutes in step of 1 0 to 59 secondes in step of 1	✓
Points				
	+1 name	YUKO	Possibility to manually modify the default name (click on the name)	✓
	+2 name	WASA-A..	Possibility to manually modify the default name (click on the name)	✓
	+3 name	IPPON	Possibility to manually modify the default name (click on the name)	✓
	Game point difference	8	Function enabled using the ON/OFF button 1 to 20 points in step of 1	✓
Penalties				
	Category 1	CAT 1	Function enabled using the ON/OFF button Possibility to rename penalty CAT 1 Number 1 to 9 secondes in step of 1 Possibility to activate the automatic mode.	✓
	Category 2	CAT 2	Function enabled using the ON/OFF button Possibility to rename penalty CAT 2 Number 1 to 9 secondes in step of 1 Possibility to activate the automatic mode.	✓
	Reset categories	OFF	Function enabled using the ON/OFF button. Can be modified. Requires the club access code.	✓
Time-out				
	Horn TO	5s ON OFF	Horn before end enabled using the ON/OFF button 1 to 20 secondes in step of 1 Horn at end enabled using the ON/OFF button Horn at start enabled using the ON/OFF button	✓
	Duration TO	15s	Function enabled using the ON/OFF button 1 to 99 secondes in step of 1	✓
	Injury time	0:10	0 to 1 minute in step of 1 0 to 59 secondes in step of 1	✓
Various				
	Maintain result	5s	1 to 90 secondes in step of 1	✓
HDMI				
	Sponsor logo	OFF	Select the display of partners' logos	✓

	Wallpaper	-	Select a colour or an image for the HDMI display default background	✓
Keys				
	Alpha message	OFF	Function enabled using the ON/OFF button	✓
	Category	ON	Function enabled using the ON/OFF button	✓